



TOCCARE SYGNO-FI TRANSLATOR LOOP CONNECTIONS

Toccare Mini to Sygno-Fi Translator Loop Connections

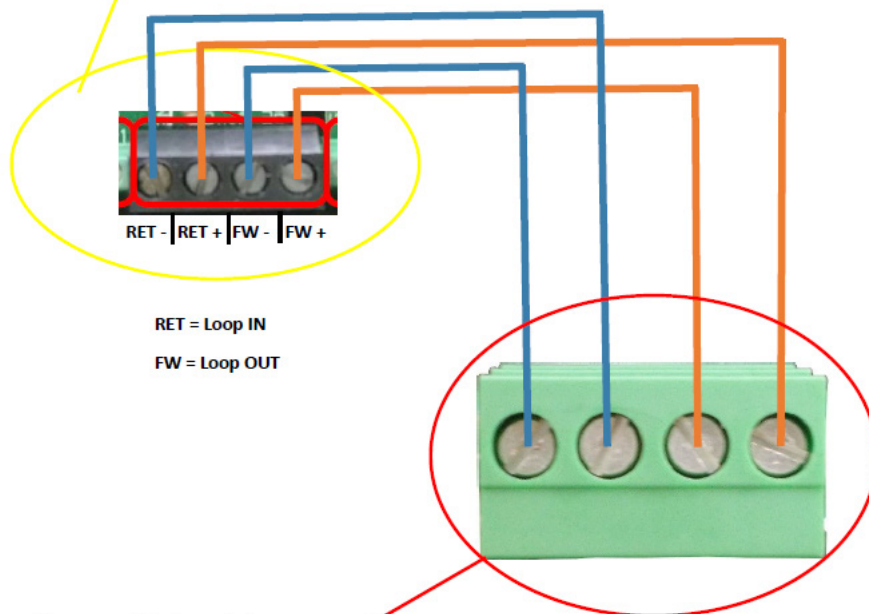

Sygno-Fi Translator

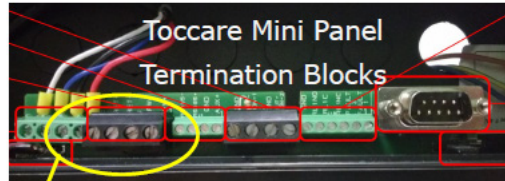