

## TRANSLATOR CONNECTIONS

### WIRING CONNECTIVITY

The figure below shows the location of the push-buttons (on the Translator Module) used during the programming process. It also indicates the location of the Translator Module LEDs - the use of these LEDs is explained throughout this manual. Detection loop connectivity is also shown:

